

BELKIN

Conserve Surge with Timer

Desktop Button

Controls Auto Off Outlets. Press to turn outlets On or Off. These outlets turn Off after 11 hours to save power.


Status Indicator

Blinking LED indicates that outlets will be turning off momentarily. Press button when blinking to keep outlets On for another 11 hours.



Auto Off Outlets (6)

Controlled by the desktop button. For devices not requiring constant power: printers, lamps, monitors, and chargers.

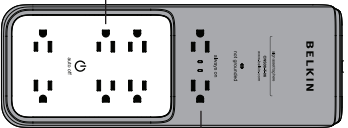

Always On Outlets (2)

Use for devices requiring power at all times: computers, phones, and clocks.

BELKIN®

Conserve Surge with Timer

User Guide

Belkin's Conserve Surge with Timer is designed to save energy by turning off some of its outlets at the end of the day.

Two outlets will remain always powered and are for devices such as computers, clocks, and phones.

Six of the outlets will be automatically switched off after the end of the day and are for devices not requiring constant power such as printers, lamps, monitors, and chargers.

How It Works

When you arrive for the day, simply press the desktop button once. That will turn on the switched outlets and begin an 11-hour timer.

If you leave for the day before the 11-hour timer has expired, you can press the button once and the "Auto Off" outlets will switch off.

If the outlets are still on after 10 hours and 45 minutes, the LED on the button will begin to blink, notifying you that the outlets will soon switch off.